


## How to Tell Whether Your Aztek is Equipped with a Driver Information Center


The Driver Information Center or DIC is a small display screen located below the speedometer. It communicates information such as Fuel Economy, Outside Temperature, and Remaining Oil Life to the driver. On Aztek's equipped with DIC, it is used to program the Aztek's customizable features.

**The DIC is located below the speedometer.**

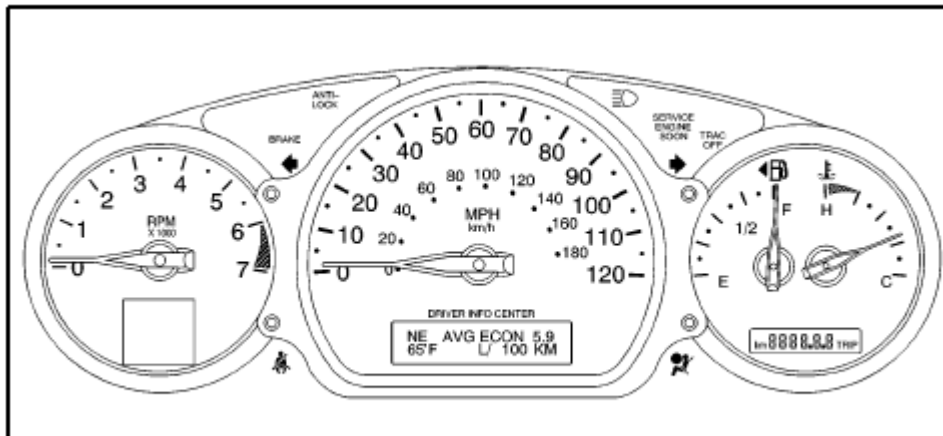

United States uplevel shown, United States base level and Canada similar

**The Mode and Set buttons control the display of the DIC.**

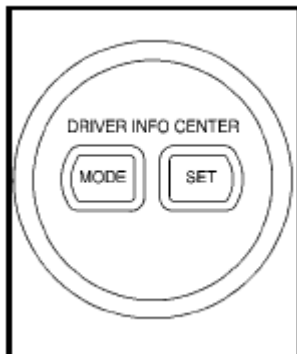

The following information can be displayed on the DIC:  
(press Mode to cycle between settings)

On startup:

“Pontiac”

Then depending on which key fob last unlocked the doors:

“Driver 1” or “Driver 2”

Compass Direction:

N, NE, E, SE, S, SW, W, NW

Outside Temperature:

(range unknown) (Current outside temperature in °F or °C)

Average Economy:

0.0 – 99.9 (miles per gallon or liters per 100 kilometers)

Instant Economy:

0.0 – 99.9 (miles per gallon or liters per 100 kilometers)

Fuel Range:

Low - ? (estimated range in miles or kilometers until out of fuel)

Fuel Used:

0.0 –99.9 (number of gallons (or liters?) of fuel since last reset)

Average Speed:

0.0 - ? (The average speed in mph or kph, since last reset)

Oil Life Left:

0% - 100% (Percentage of oil life remaining)

Use Set To Select English Metric:

(Pressing Set changes the DIC, odometer, and trip odometer to use metric or English units)

Off:

When left in this mode, the DIC turns off.

This file was downloaded from [AztekFanClub.com](http://AztekFanClub.com), where the latest version can always be found.

Version History:

July 15, 2003 - Initial Release